

AFC Combustion Air Blowers Operating Information

Gross Weight: 740 lbs (336 kilo)

- 1. Arrow #1 points to the ONLY Lifting Lug placed and designed to lift this machine with crane rigging. There are smaller points on the blower placed for maintenance ONLY. Bottom plate is designed to accommodate Forklifts from all four sides.
- 2. Arrow #2 points to the Air Damper. Same use as burner damper—100% open when purging/firing. New burners do not have dampers installed.





New Hotwork blower control box. Note different electrical connections:

New NEMA connections are for use with NEW control sets.

OLD Connection is for use with existing equipment.

Control box and all exposed buttons/meters/connections are weather tight when closed.

KEEP CONTROL BOX SECURELY CLOSED AT ALL TIMES.



Blower Controls and Lamps. Lockable <u>SERVICE DISCONNECT</u> turns off ALL power to control box.

<u>BLOWER START</u> button starts blower and alarm sounds. <u>AUX REC MODE</u> Switch must be turned first,
Then <u>ALARM RESET/SILENCE</u> Button will silence alarm. **POWER BUMP MAY SHUT TRIP MAGNETIC STARTER AND SHUT BLOWER OFF. PUSH <u>BLOWER START BUTTON TO RESTART BLOWER</u>

AND PUSH <u>ALARM RESET/SILENCE</u> BUTTON TO SILENCE ALARM.**



⇐ SERVICE DISCONNECT Has a locking feature that prevents the cabinet door from being opened while energized. SERVICE DISCONNECT must be turned off before attempting to open cabinet. Supply power should be turned off and locked out prior to opening cabinet.


← Locking Feature in the LOCKED position, SERVICE DISCONNECT turned OFF.

SERVICE DISCONNECT turned OFF \Rightarrow Cabinet Door Locking feature UNLOCKED.

Cabinet Door Locking Feature MUST be in the UNLOCKED position to close cabinet door ⇒



PAGE 4 Hotwork 11184 (Rev 0)

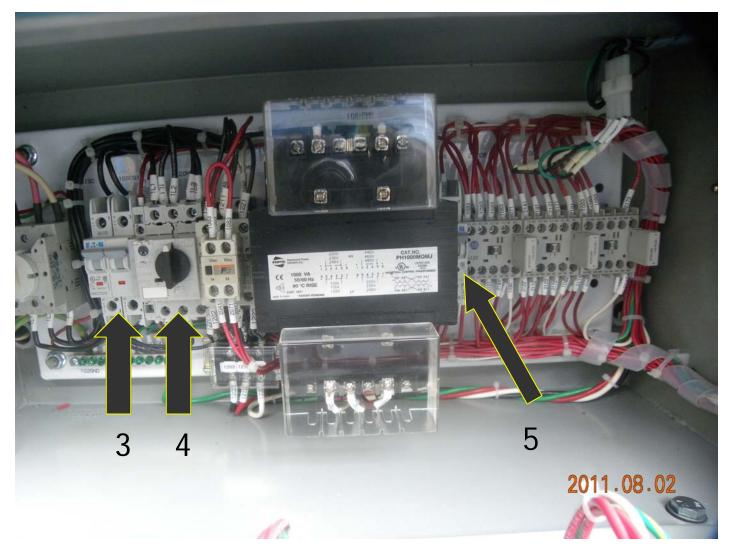

Inside of Control Cabinet: ONLY THREE Field Service Items inside this cabinet:

- 3. Twin Breakers, Normally ON: Red indicator showing;
- 4. Motor Phase Protection, shown in Normal RUN Position;
- 5. Single Circuit Breaker not visible in this photo, Normally ON: Red indicator showing;